

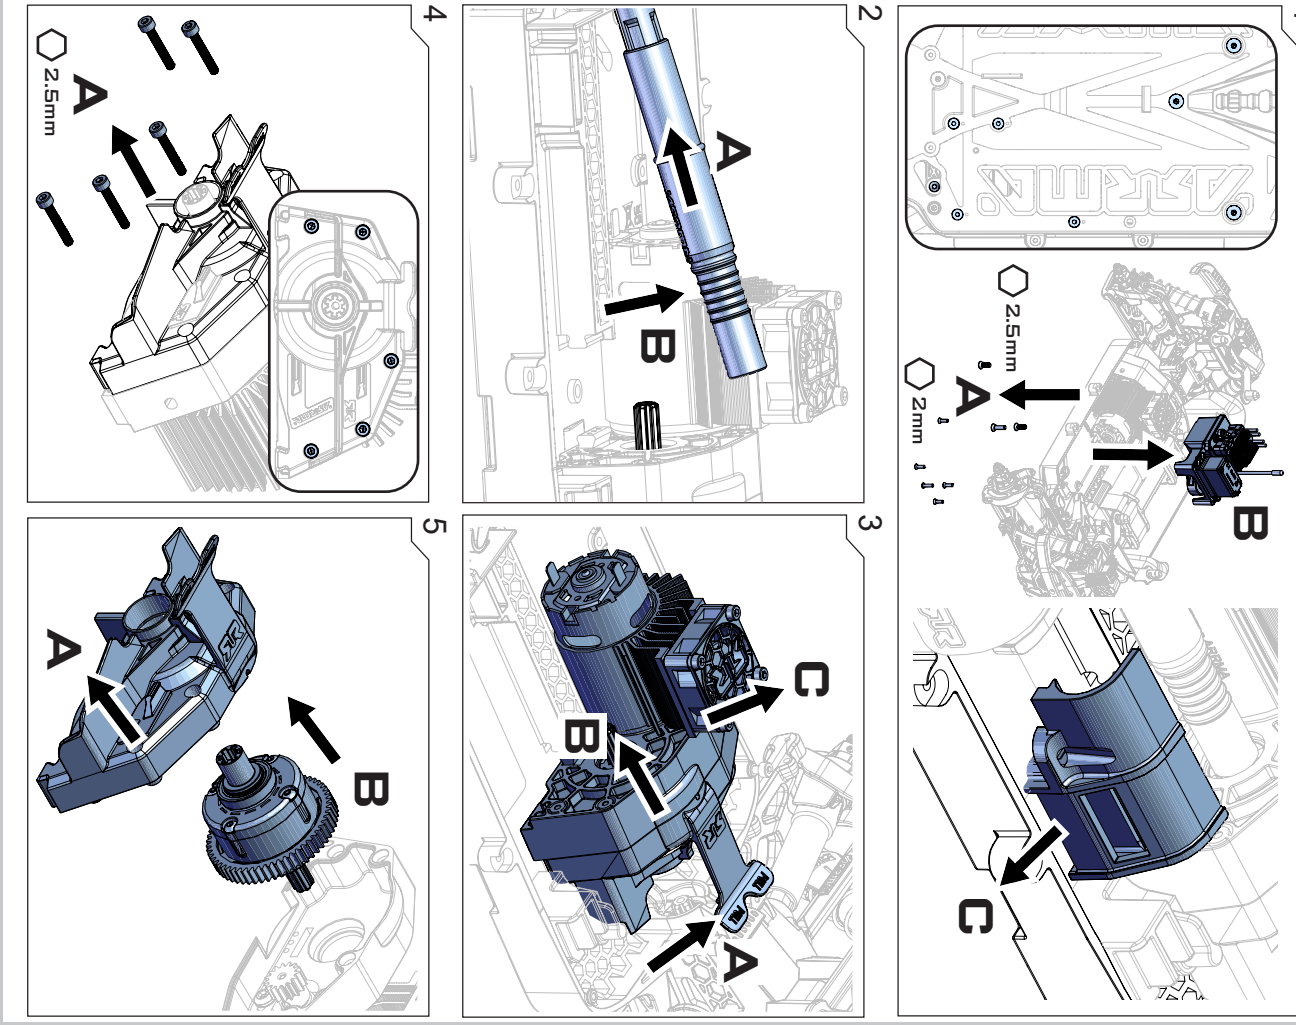
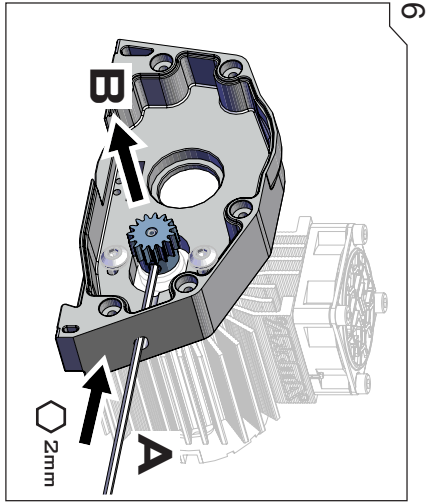
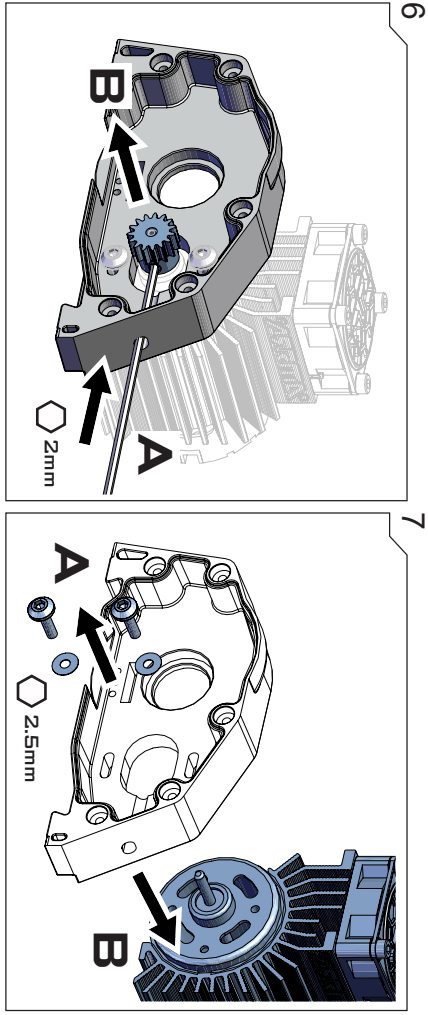


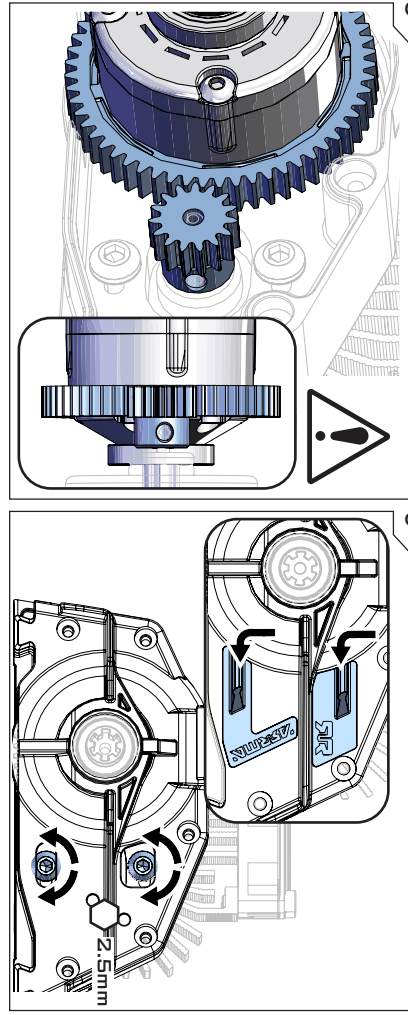

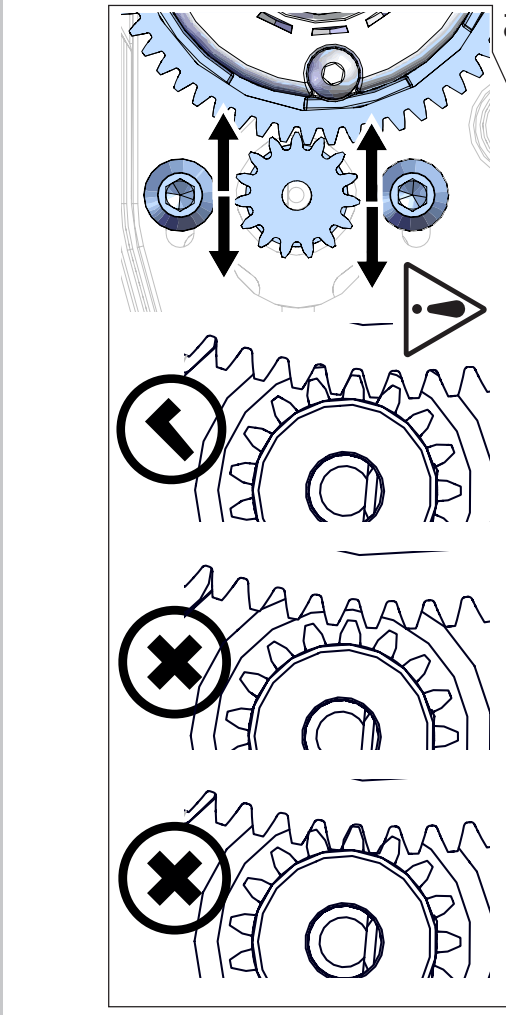

HOW TO... WIE... COMMENT...

Change the Pinion / Motor. Wechseln man das Motorizeliden Motor. Changez le Pignon / Moteur.

OPTIONS...OPTIONEN... POSSIBILITÉS....



ARA311167 - Metal Spur Gear (57T,0.8M)



ARA340191 - Aluminum Steering Rack



- ARA311075 - 13T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311076 - 14T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311078 - 16T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311079 - 17T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311080 - 18T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311081 - 19T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311082 - 20T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311083 - 21T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311084 - 22T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear
- ARA311085 - 23T 0.8 Mod 1/8" Bore CNC Steel Pinion Gear

